



Order Online: [WWW.RENNLINE.COM](http://WWW.RENNLINE.COM)

EM Sales@rennline.com

PH 802.893.7366

FX 802-893-7311

Driven to improve excellence.

## READ BEFORE INSTALLATION


The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Do to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use and should be installed by a qualified automotive technician.

### INSTALLATION INSTRUCTIONS FOR DEAD PEDAL

1965-1989 Porsche 911,912,930 Targa and Cab

1989-1998 Porsche C2/C4/993 All

Porsche 944/924/968 All

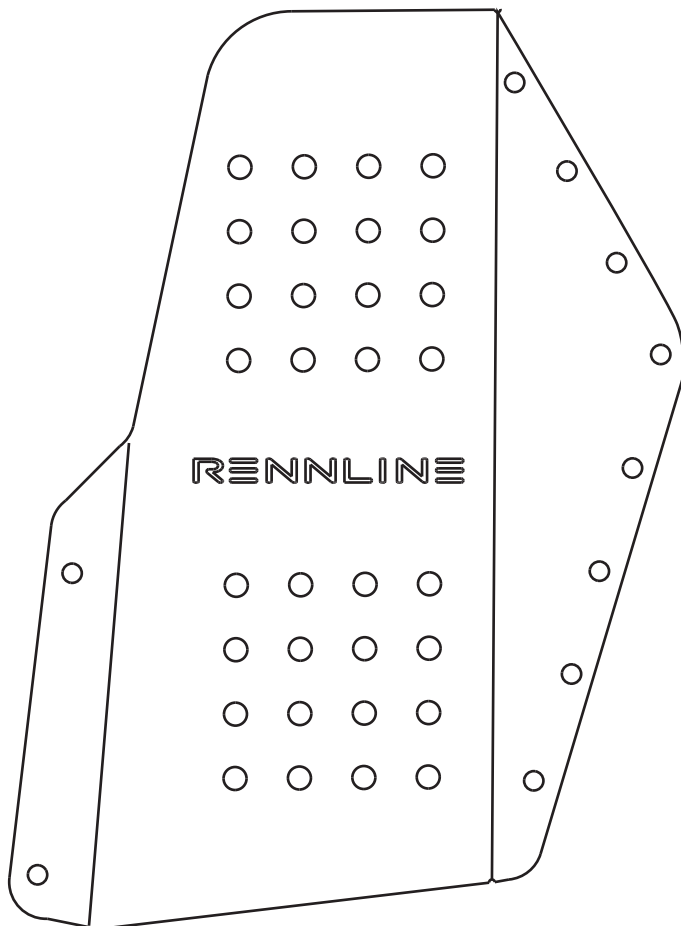

Check to make sure you that have all parts listed prior to installation. If anything is missing contact us immediately.

#### Parts List

(3) #8x5/8" Black S/S Truss Screw - MC93406A196

(1) Dead Pedal

A. Place dead pedal in mounting location.

B. Drill the 2 front mounting holes and 1 back mounting hole (choose the one with the most contact to the frame) into the frame rail using a 1/8 drill bit.

C. Attach dead pedal using the supplied self tapping sheet metal screws.

