




Order Online: [WWW.RENNLINE.COM](http://WWW.RENNLINE.COM)  
EM Sales@rennline.com  
PH 802.655.5311  
FX 802-655-6283

Driven to improve excellence.

## READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Do to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use only and should be installed by a qualified automotive technician.

### INSTALLATION INSTRUCTIONS FOR DEAD PEDAL 1996+ Porsche Boxster, 996/997 and Cayman

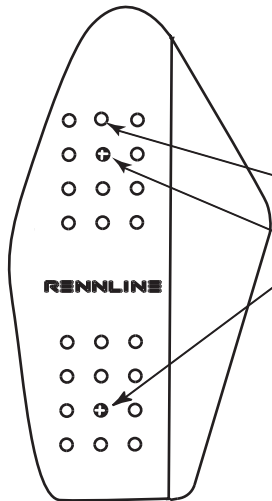


#### 2005+ 997/987/Cayman

- Install rubber grip into this location. (Note: Run rubber grip under hot water to soften rubber prior to pressing into hole.)
- Place aluminum dead pedal over the top of factory unit.
- Drill (2) 1/16 holes into factory plastic pedal cover and install using the supplied black screws.

Check to make sure you that have all parts listed prior to installation. If anything is missing contact us immediately.

#### Parts List

- (2) #8/32X5/8" Black S/S Truss Head Screw - MC93406A196
- (1) Dead Pedal

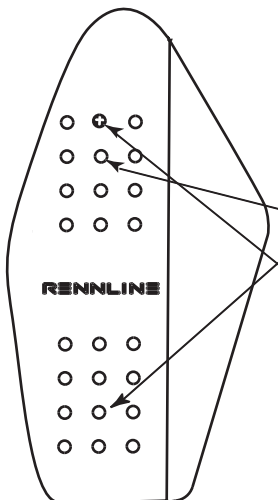

#### 1996-2004 996/986

- Remove factory plastic dead pedal.
- Install rubber grips into these 2 locations. (Note: Run rubber grip under hot water to soften rubber prior to pressing into holes.)
- Install dead pedal using one of the supplied black screws into the factory mounting hole

NOTE: When installing in a 1999-2004 996/986 car it may be necessary to slide the bottom left corner of dead pedal behind the carpet kick panel.