



Driven to improve excellence.

Order Online: WWW.RENNLINE.COM

EM Sales@rennline.com

PH 802.893.7366

FX 802-893-7311

READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Do to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use and should be installed by a qualified automotive technician.

INSTALLATION INSTRUCTIONS FOR THROTTLE EXTENSIONS

Check to make sure that you have all parts listed prior to installation. If anything is missing contact us immediately.

Parts List

- (4) 8/32 x.5" S/S Oval Screw - MC91802A194
- (4) 8/32 S/S Nylon Nut - MC90101A009
- (1) (Heel + Toe kit) Throttle Extensions
- (1) Backer Plate


Step 1

A. Attach throttle extensions to the backer plate using the supplied #8-32 X .5" S/S screws and nuts.



Step 2

A. Install the assembled throttle extension unit between your Rennline rubber grip throttle cover and your factory plastic pedal. Install using the hardware supplied in your pedal cover kit.

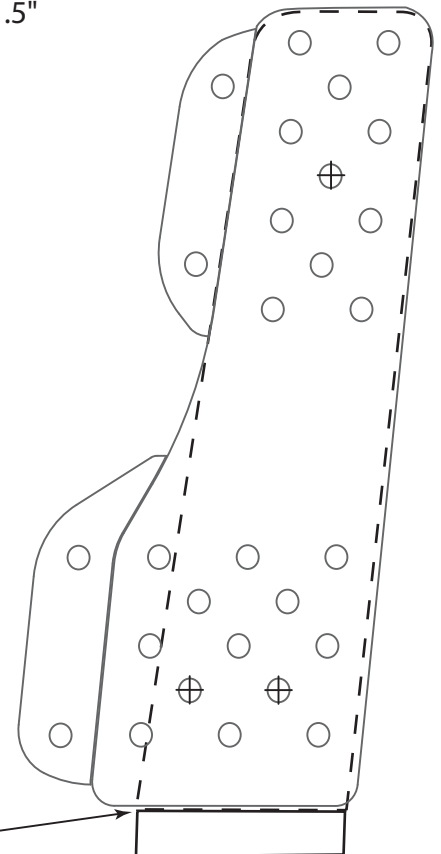

Pivot Point